


1

Locate centre point location on wall where the 19 will be mounted and use the wall cleat or the above diagram to mark the screw holes.


Note: See the card accompanying the 19 and verify that the wall material can support the weight of the 19.



2


Drill holes and mount wall anchors as required. Bocci recommends using molly or toggle bolts to support in drywall wall mountings. Use appropriate hardware for the wall material.

Note: Bocci does not provide wall anchors or screws.

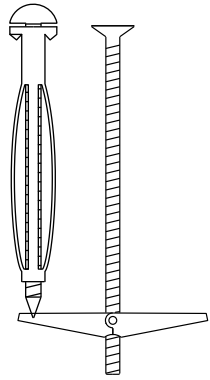

3

Mount the wall cleat using screws or bolts. Ensure that all screws are set within the countersunk holes and flush with the surface of the cleat.

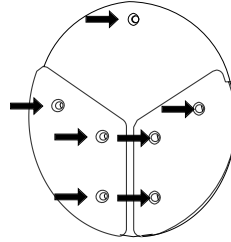


4

The 19 comes with a bracket attached that allows for three different orientations for wall mounting. Choose one of these orientations and simply slide the bracket downwards into the cleat. This should require almost no force, if it does, please lift the 19 off and inspect that the screws do not protrude from their countersunk holes.


Note: when handling the 19, wear gloves to protect the work.

Due to the sand casting process used to create the 19, there is often 'sand' embedded in the texture of the overspill. Using a small brush, sweep any excess sand from the 19 before mounting.

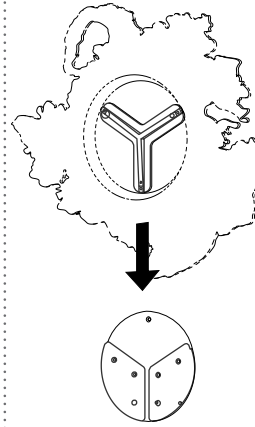


5

Check that the 19 is flush (parallel with the wall) to ensure that the bracket is seated properly in the cleat.

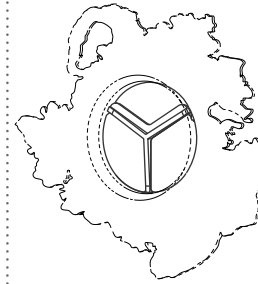

6

Clean fingerprints from surfaces. See 19 polishing for initial cleaning as well as subsequent maintenance.

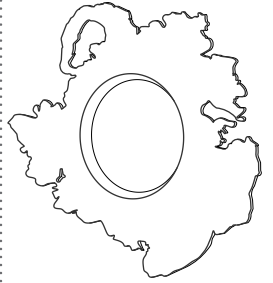

For additional assistance, please contact Bocci:

BOCCI Vancouver
info@bocci.ca
www.bocci.ca

BOCCI Berlin
europe@bocci.ca
www.bocci.ca

US patent: D694,068 S
EU patent: 00182-12-0001

Made in Vancouver, Canada